

Read this section carefully before you ride. It presents the location of the basic controls on your CRF.

Operation Component Locations	6
MIL (Malfunction Indicator Lamp)	7
MIL Blink Pattern.....	7
Current DTC/Freeze DTC	7
Circuit Inspection.....	8
DTC Index	9
Mode Indicator.....	10