

Maintenance Schedule

Perform the *Pre-ride Inspection* (page 13) at each scheduled maintenance period.

I: Inspect and Clean, Adjust, Lubricate or Replace if necessary. C: Clean. A: Adjust. L: Lubricate. R: Replace.

ITEMS	FREQUENCY	NOTE	Each race or about 2.5 hours	Every 3 races or about 7.5 hours	Every 6 races or about 15.0 hours	Every 9 races or about 22.5 hours	Every 12 races or about 30.0 hours	Ref. Page
FUEL LINE		(NOTE 6)	I				R	40
FUEL PUMP FILTER		(NOTE 6)					R	44
THROTTLE OPERATION			I					60
AIR FILTER		(NOTE 1)	C					56
CRANKCASE BREATHER			I					58
SPARK PLUG			I					67
VALVE CLEARANCE		(NOTE 4)			I			68 – 76
ENGINE OIL		(NOTE 3)	I		R			49
ENGINE OIL FILTER		(NOTE 3)			R			50
ENGINE IDLE SPEED			I					61
PISTON AND PISTON RINGS					R			77
PISTON PIN					R			80
TRANSMISSION OIL		(NOTE 5)	I		R			52
RADIATOR COOLANT		(NOTE 2)	I					54
COOLING SYSTEM			I					55
DRIVE CHAIN			I, L	R				118
DRIVE CHAIN SLIDER			I					118
DRIVE CHAIN ROLLER			I					119
DRIVE SPROCKET			I					120
DRIVEN SPROCKET			I					120
BRAKE FLUID		(NOTE 2)	I					112
BRAKE PADS WEAR			I					114
BRAKE SYSTEM			I					111
CLUTCH SYSTEM		(NOTE 5)	I					62
CONTROL CABLES			I, L					128
EXHAUST PIPE/MUFFLER			I					121
SUSPENSION			I					87, 88
SWINGARM/SHOCK LINKAGE				L				29, 88
FORK OIL EXCEPT DAMPER		(NOTE 3)		R				91, 100, 102, 105
FORK OIL DAMPER						R		95
NUTS, BOLTS, FASTENERS			I					129, 164 – 166
WHEELS/TIRES			I					115 – 117
STEERING HEAD BEARINGS						I		128

WE RECOMMEND THESE ITEMS BE SERVICED BY REFERRING TO AN OFFICIAL HONDA SERVICE MANUAL.

This maintenance schedule is based upon average riding condition. Machine subjected to severe use require more frequent servicing.

- NOTE:
1. Clean after every moto for dusty riding condition.
 2. Replace every 2 years. Replacement requires mechanical skill.
 3. Replace after the first break-in ride.
 4. Inspect after the first break-in ride.
 5. Replace the transmission oil, if the clutch discs and plates are replaced.
 6. Replace every year.