


Exhaust Pipe/Muffler

Exhaust Pipe Removal


1. Remove the left and right mufflers (page 121).
2. Remove the exhaust pipe joint nuts (1), exhaust pipe (2) and gasket (3).

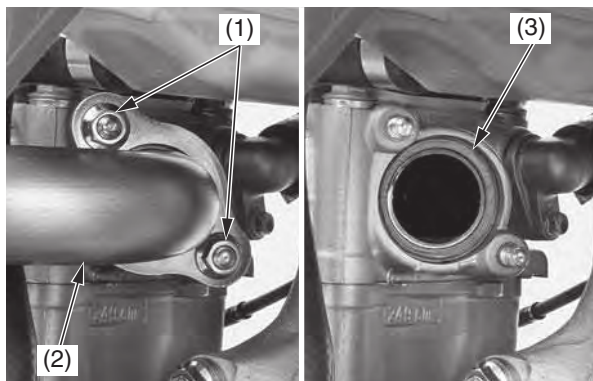

- (1) exhaust pipe joint nuts
(2) exhaust pipe
(3) gasket

Exhaust Pipe Installation

1. Install a new exhaust pipe gasket (1) as shown.
2. Install the exhaust pipe (2) and exhaust pipe joint nuts (3) but do not tighten the nuts yet.

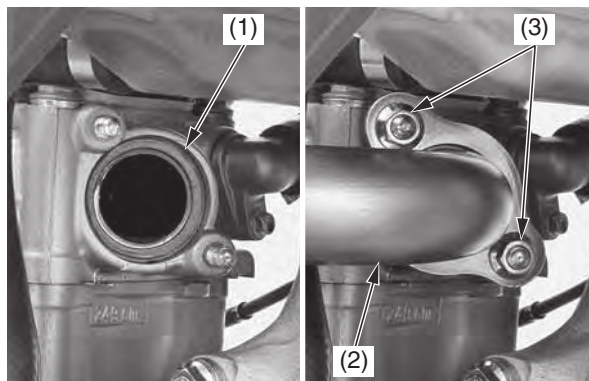

- (1) exhaust pipe gasket (new)
(2) exhaust pipe
(3) exhaust pipe joint nuts

3. Install the right muffler (page 122) but do not tighten the bolts yet.
4. Tighten the exhaust pipe joint nuts to the specified torque:
15 lbf·ft (21 N·m, 2.1 kgf·m)
5. Tighten the right muffler clamp bolt, right muffler mounting A bolt and B bolt (page 122).
6. Install the left muffler (page 123).