

G

gap, spark plug 67
 gasohol..... 167
 gasoline..... 40
 gearing 152
 guidelines,
 steering damper 150
 suspension adjustment..... 145

H

handlebar inspection..... 128
 Honda,
 contacting 175
 Rider’s Club 177
 service manual..... 174
 your dealer..... 176

I

identification, vehicle 162
 idle knob, fast 17, 61
 idle speed, engine 61
 indicator,
 circuit inspection 8
 DTC index 9
 MIL blink 7
 mode 10, 134
 inner chamber air pressure 137
 inspection, pre-ride 13
 instruments 5

L

labels, safety 4
 logbook, competition..... 168

M

maintenance,
 after competition32
 before & after competition.....30
 between motos & practice.....30
 component locations33
 general competition.....26
 importance22
 safety23
 schedule24
 manual, service 174
 mode indicator 10, 134
 modifications..... 3

O

oil,
 engine.....49
 fork.....91
 transmission52
 operating instructions..... 15
 operation component locations 6
 optional,
 parts list..... 170
 sprockets 152
 outer chamber air pressure 138
 oxygenated fuels 167

P

pads, brake 114
 parts, optional..... 170
 personal fit adjustments 154
 ping, engine.....40
 plug, spark.....67
 pre-load, rear suspension 140
 pre-ride inspection 13
 protective apparel..... 2

R

rear suspension adjustment..... 147
 Rider’s Club Honda (USA only) 177
 riding,
 apparel 2
 basic operation..... 16
 before..... 11
 important safety information 2
 safety precautions 2

S

safety,
 a few words about.....Safety Messages
 important information..... 2
 important precautions 2
 labels..... 4
 maintenance..... 23
 riding precautions 16
 schedule, maintenance 24
 seat 34
 serial numbers..... 162
 service,
 customer 173
 manuals..... 174
 spare parts 171
 spark knock..... 40
 spark plug,
 maintenance..... 67
 reading 148
 specifications 163
 spring pre-load, rear suspension 140
 starting,
 engine 17
 troubleshooting..... 159
 steering damper,
 adjustment 149
 guidelines..... 150
 operation inspection 125

(cont’d)