


Fuel System

Fuel Pressure Relieving

1. Hang the fuel tank to the left side of the frame (page 34).
2. Disconnect the fuel pump connector (1).

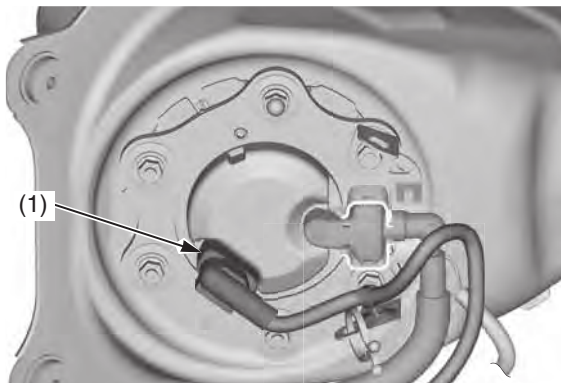

(1) fuel pump connector


3. Reposition the fuel tank and start the engine and let it idle until the engine stalls.

Fuel Line Replacement

Disconnection


1. Relieve the fuel pressure (this page).
2. Hang the fuel tank to the left side of the frame (page 34).
3. Remove the fuel quick connect fitting cover (1) from the fuel pump (2).
4. Check the fuel quick connect fitting (3) for dirt, and clean if necessary.

Injector side:

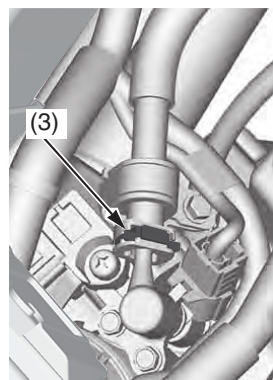


- (1) fuel quick connect fitting cover
- (2) fuel pump
- (3) fuel quick connect fitting

Fuel pump side:

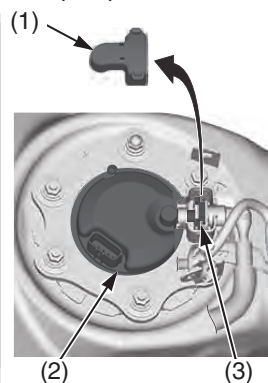

5. Remove the bolt (4), clamp (5) and setting rubber (6).

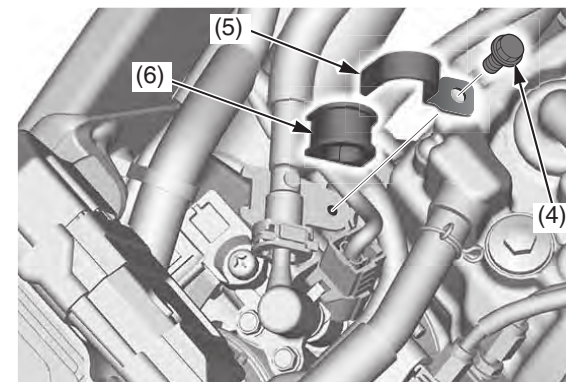


- (4) bolt
- (5) clamp


- (6) setting rubber

6. Place a shop towels (7) over the each fuel quick connect fitting.

Injector side:

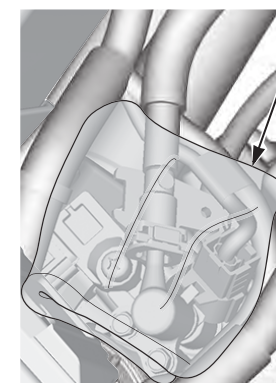

Fuel pump side:

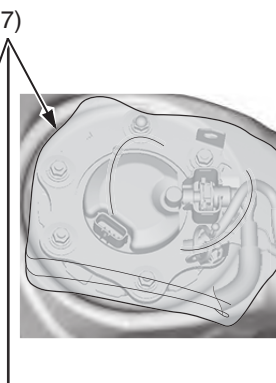

- (7) shop towels