 


- 6 Press the **SET** button. The clock is set, and then the display moves to the changing of the speed and mileage unit.
  - ▶ The adjustment can also be set by turning the ignition switch to the OFF position.

If no buttons were pressed for about 30 seconds, the display will stop flashing automatically and the adjustment will be cancelled.

## 2 Changing the speed and mileage unit:

- 1 Press the **SEL** button to select either "km/h" & "km" or "mph" & "mile" for the speedometer, odometer and tripmeters.



- 2 Press the **SET** button. The speed and mileage unit is set, and then the display will return to the ordinary display.