

Ignition Switch

Switches the electrical system on/off, locks the steering.

- ▶ Key can be removed when in the OFF or LOCK position.

Steering Lock: ➡ P.28

ON

Turns electrical system on for starting/riding.

OFF

Turns engine off.

LOCK


Locks steering.



Rear ABS switch **CRF250RLA**

Switches the ABS function on the rear wheel on/off. ➡ P.29

Engine stop switch

Should normally remain in the  (run) position.

- ▶ In an emergency, switch to the  (Stop) position (the starter motor will not operate) to stop the engine.

Start button