


## Headlight

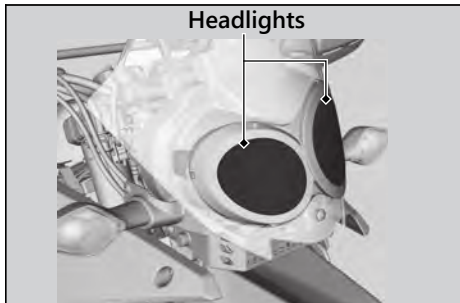

The headlights use several LEDs. If there is a LED which is not turned on, see your dealer for this servicing.

## Brake light/Taillight Bulb

1. Remove the seat. ► P. 55
2. Remove the hook bolts and collars.
3. Remove the prongs from the grommets.
4. Remove the rear fender.

