
## Piston/Piston Rings/Piston Pin

9. Connect the right radiator hose (16) to the right radiator hose joint (17) as shown.




- (16) right radiator hose(17) right radiator hose joint
- 10. Tighten the radiator hose clamp screw (18) as illustrated below.

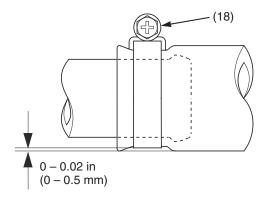


(18) radiator hose clamp screw

- 11. Connect the left radiator hose (19) to the left water hose joint (20) of the cylinder head as shown.
- 12. Connect the ECT sensor connector (21).
- 13. Install the harness band clip (22).

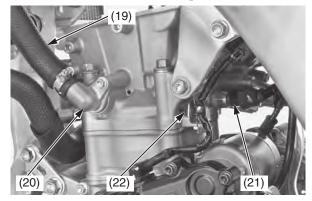

- (19) left radiator hose
- (20) left water hose joint
- (21) ECT sensor connector
- (22) harness band clip
- 14. Tighten the radiator hose clamp screw (18) as illustrated below.

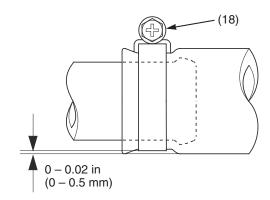

(18) radiator hose clamp screw

- 15. Install the valve shims, intake cam sprocket, camshafts, camshaft holder and cam chain guide (page 87).
- 16. Install the crankshaft hole cap and timing hole cap (page 91).
- 17. Install the cylinder head cover (page 91).
- 18. Install the spark plug (page 81).
- 19. Install the left and right exhaust pipes (page 134).
- 20. Install the subframe (page 41) and left and right mufflers (page 132).
- 21. Install the fuel tank and seat (pages 33, 35, 38).
- 22. Fill and bleed the cooling system (page 165). Check for the following:
  - compression leaks
  - abnormal engine noise
  - secondary air leaks
  - exhaust gas leaks
  - coolant leaks
  - oil leaks