

HRC-Launch Control System

To operate the system

1. Perform steps 1 and 2 in *To change the level*.
2. Shift into 1st or 2nd gear.
3. When launching, open the throttle halfway or more. The system operates.
 - The reduced rev limit is controlled and will gradually return to normal in a few seconds. Once the rev limit returns to normal, the system is disabled.
 - The launch control system indicator comes on (purple) while the system is operating.
 - If you open the throttle halfway or more before starting, control system stops before starting and there is no effect.
 - If you close the throttle immediately, the system may not operate.
 - When the launch control system operates, the following condition will disable launch control:
 - Vehicle is in 3rd gear
 - The throttle completely closed
4. Make sure that the launch control system indicator is off. If it is not off, the system is not disabled. Quickly press the start button to disable the system.