


Indicators & Displays

Changing the Speed and Mileage Unit

To adjust the Speed and Mileage Unit proceed as follows:

1. Refer to Backlight Brightness Adjustment on previous step.
2. Press SEL button to select either “mph” and “mile” or “km/h” and “km”.

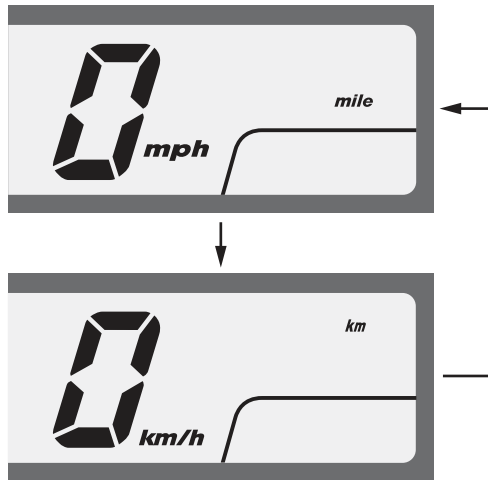

3. When selecting the “mph” and “mile”
Press and hold SEL button. The speed and mileage unit is set, and then the display will return to the normal mode.
When selecting the “km/h” and “km”
Press and hold SEL button. The speed and mileage unit is set, and then the display moves the changing of the fuel mileage unit.


The established setting can also be set by turning the ignition switch to the OFF position. The control is automatically switched from the setting mode to the normal mode if the button is not pressed for about 30 seconds. Even in this case, established setting is maintained.

Changing the Fuel Mileage Unit

If the “mph” for speed and “mile” for mileage are selected, the fuel mileage unit cannot be select.

To adjust the Fuel Mileage Unit proceed as follows:

1. Refer to Changing the Speed and Mileage Unit on previous step.
2. Press SEL button to switch between “km/L” or “L/100km”.

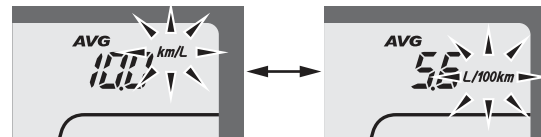

3. Press and hold SEL button. The fuel mileage unit is set, and then the display will return to the normal mode.

The established setting can also be set by turning the ignition switch to the OFF position. The control is automatically switched from the setting mode to the normal mode if the button is not pressed for about 30 seconds. Even in this case, established setting is maintained.