

G	
gap, spark plug	86
gasohol	187
guidelines, suspension adjustment.....	150

H	
handlebar inspection.....	136
headlight dimmer switch.....	15
Honda, contacting	197
service manual.....	194
your dealer	198
horn button	15

I	
identification, vehicle	178
idle knob, fast	25, 80
idle speed, engine.....	80
if the high coolant temperature indicator lights ... 170	
if you have a burned-out light bulb	171
if your engine quits or won't start	165
ignition switch	15
indicator, fuel reserve indicator	9
high beam indicator	9
high coolant temperature indicator	9
MIL indicator	9
neutral indicator	9
turn signal indicator	9
inspection, pre-ride.....	19
instruments	7

L	
labels, safety	5
load limits.....	21
load limits & guidelines	21
loading	21
loading guidelines	21

M	
maintenance record (on-road use only).....	38
maintenance, after competition	44
before & after competition	43
between races & practice.....	43
component locations	45
general competition	39
importance	32
safety	33
schedule.....	35
manual, service	194
modifications	3
multi-function display.....	10

O	
odometer	12
Off-Road Logbook	188
off-road safety.....	4
oil, engine.....	69
fork	108
operating instructions	23
operation component locations	8
optional, parts list	190
oxygenated fuels	187

P	
pads, brake.....	125
parking	29
parts, optional	190
passing light control switch.....	15
personal fit adjustments	156
pinging, engine	60
plug, spark	86
pre-load, rear suspension.....	146
pre-ride inspection.....	19
protective apparel	2, 18

R	
rear suspension adjustment.....	146
reporting safety defects (USA only).....	199
riding, apparel.....	2
basic operation	23
before	17
important safety information	2
safety precautions	2

(cont'd)