

# Fuel System

---

## Fuel Pressure Increasing

Make sure the fuel remains enough (0.3 US gal (1.0 ℓ) minimum) in the fuel tank and add fuel if necessary before increasing fuel pressure.

With the throttle closed.

Pull the clutch lever all the way in, and depress the start button.

The engine will start up by increasing the fuel pressure.

If the engine does not start, check all connector connections and/or refer to an official Honda Service Manual (page 194) for troubleshooting of the PGM-FI symptom.