
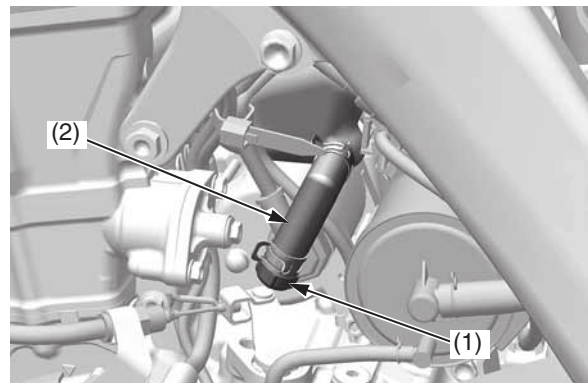


Refer to *Important Safety Precautions* on page 33.

Service more frequently if your motorcycle is ridden in the rain or often at full throttle. Service the breather if you can see deposits in the transparent section of the crankcase breather tube. If the breather tube overflows, the air filter may become contaminated with engine oil causing poor engine performance.

Draining

1. Remove the crankcase breather tube plugs (1) from the crankcase breather tubes (2) and drain deposits into a suitable container.
2. Reinstall the crankcase breather tube plugs.

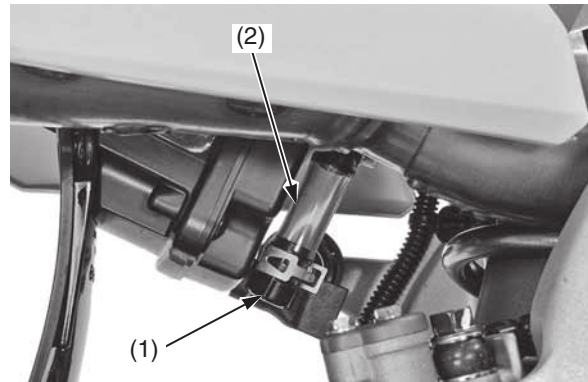

- (1) crankcase breather tube plugs
(2) crankcase breather tubes