 



## Optional Parts List

---

These tools may be ordered from your authorized dealer.

TOOLS	Remarks
Pin spanner A 	To adjust spring preload. (two spanners required)
Workstand 	For maintenance
Air gauge	For checking tire air pressure