



## Piston/Piston Rings/Piston Pin

12. Connect the ECT sensor connector (21).

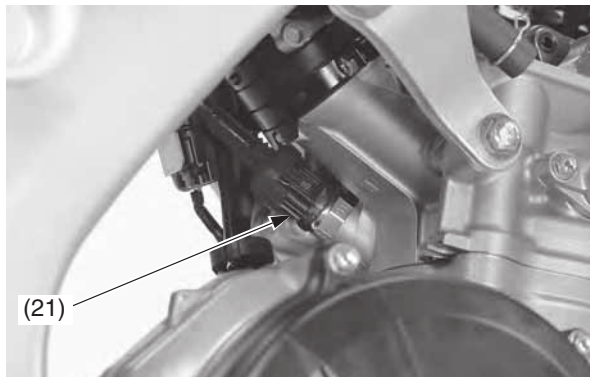

(21) ECT sensor connector

13. Install the ignition coil (22) and tighten the ignition coil bolts (23) to the specified torque: 7 lbf-ft (10 N·m, 1.0 kgf·m)  
Connect the ignition coil A connector (24) and B connector (25).

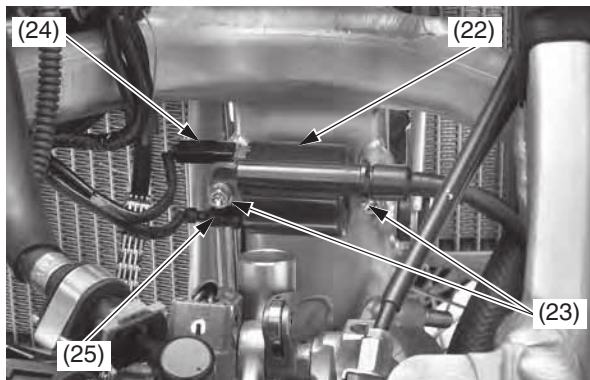

(22) ignition coil  
(23) ignition coil bolts  
(24) ignition coil A connector  
(25) ignition coil B connector

14. Install the shims, camshaft and camshaft holder (page 84).
15. Install the crankshaft hole cap (page 86).
16. Install the cylinder head cover (page 87).
17. Install the spark plug (page 78).
18. Install the exhaust pipe (page 129).
19. Install the subframe (page 40) and left and right mufflers (page 127).
20. Install the fuel tank and seat (pages 34, 36, 38).
21. Fill and bleed the cooling system (page 163).  
Check for the following:
  - compression leaks
  - abnormal engine noise
  - secondary air leaks
  - exhaust gas leaks
  - coolant leaks
  - oil leaks