Exhaust Pipe/Muffler

Refer to Important Safety Precautions on page 23.

Exhaust Pipe/Muffler Inspection

Check the mounting bolts and exhaust pipe joint nuts for tightness.

Check the exhaust pipe and mufflers for cracks or deformation.


A damaged exhaust pipe and mufflers may reduce engine performance.

Muffler Removal


(CRF450R/RX)

- 1. Remove the seat (page 34).
- 2. Remove the side covers (1) and air cleaner housing covers (2) by removing the bolts (3).

The procedure is the same for the both right and left side.

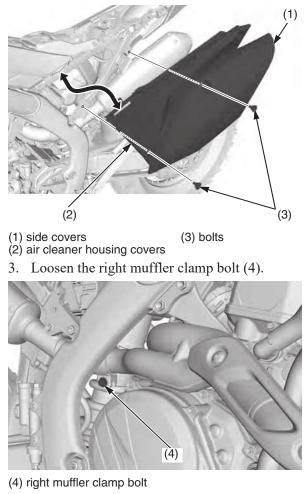

4. Remove the right muffler mounting A bolt (5), B bolt (6), washer (7), and right muffler (8).

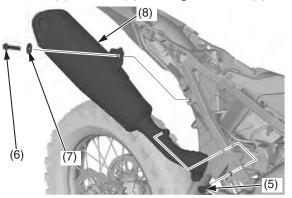

(5) right muffler mounting A bolt(6) right muffler mounting B bolt(7) washer(8) right muffler