## Maintenance Schedule

	FREQUENCY		Whichever Comes First		Regular Maintenance Interval				Refer
			km mi	150 100	1,000 600	2,000 1,200	3,000 1,800	4,000 2,400	to Page:
		-							
ITE	TEMS		Month	1	6	12	18	24	1
*	FUEL LINE					I		I	41
* *	FUEL STRAINER SCREEN					С		С	42
*	THROTTLE OPERATION					I		I	55
	AIR CLEANER	(NOTE 1)			С	С	С	С	51
	CRANKCASE BREATHER				1	I	I	I	53
	SPARK PLUG				I	I	I	I	61
*	VALVE CLEARANCE			I	I	I	I	I	67
	ENGINE OIL			R	R	R	R	R	43
	ENGINE OIL FILTER			R	R	R	R	R	44
*	DECOMPRESSOR SYSTEM			I	I	I	I	I	-
* *	ENGINE IDLE SPEED			I	I	I	I	I	136
	RADIATOR COOLANT	(NOTE 2)				I		R	48
	COOLING SYSTEM			1	1	I	I	I	48
	TRANSMISSION OIL			R	R	R	R	R	46
	DRIVE CHAIN	(NOTE 1)		I, L	I, L: every 500 km (300 mi) or 3 months				96-98
	DRIVE CHAIN SLIDER				1	I	1	I	98
	BRAKE FLUID	(NOTE 2)			1	I	1	I	89
	BRAKE PADS WEAR				I	I	I	I	91
	BRAKE SYSTEM			I	I	I	I	I	88
*	HEADLIGHT AIM					I		I	104
	CLUTCH SYSTEM			I	1	I	1	I	56
	SIDE STAND					I		I	95
*	SUSPENSION					I		I	84,85
*	SPARK ARRESTER				C: every 1,600 km (1,000 mi) or every 100 operating hours				66
*	NUTS, BOLTS, FASTENERS			I		I		I	100,155-15
* *	WHEELS/TYRES			I	I	I	I	I	92,93
* *	STEERING HEAD BEARINGS					I		I	99

MAINTENANCE SCHEDULE – REGULAR OFF-ROAD USE (NON-COMPETITION)

Summary of Maintenance Schedule Notes and Procedures;

## NOTES:

- 1. Service more frequently when ridden in wet or dusty conditions.
- 2. Replace every 2 years. Replacement requires mechanical skill.

\* Should be serviced by your Honda dealer, unless the owner has the proper tools and service data and is mechanically qualified. Refer to the official Honda Shop Manual.

\*\* In the interest of safety, we recommend these items be serviced only by your Honda dealer.