


## Crankcase Breather

Refer to *Safety Precautions* on page 25.

### Crankcase Breather

Service more frequently if your CRF is ridden in the rain or often at full throttle.  
Service the breather if you can see deposits in the transparent section of the drain tube.

1. Remove the crankcase breather tube plug (1) from the tube (2) and drain the deposits into a suitable container.
2. Reinstall the crankcase breather tube plug.

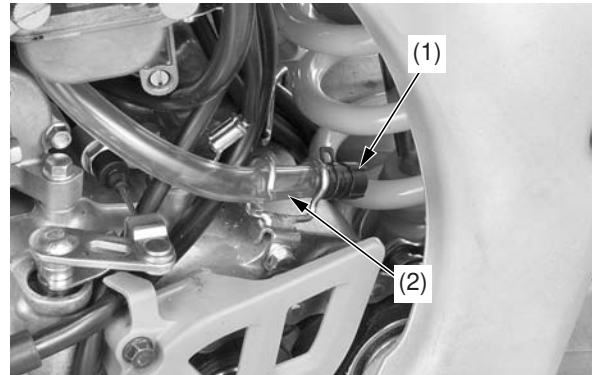

(1) crankcase breather tube plug  
(2) tube