


Piston/Piston Rings/Piston Pin

Cylinder Head Removal


1. Clean the area above the engine before disassembly to prevent dirt falling into the engine.
2. Drain the engine oil (page 44).
3. Drain the radiator coolant after cooling the motorcycle (page 143).
4. Remove the seat and fuel tank (pages 36, 37).
5. Lift the subframe to the upright position (page 39).
6. Remove the carburetor (page 132).
7. Remove the exhaust pipe (page 65).
8. Remove the spark plug (page 61).

9. Remove the camshaft holder assembly, lifters and shims (page 69).
10. Remove the left radiator grill (1) and left radiator lower mounting bolt/washer (2).

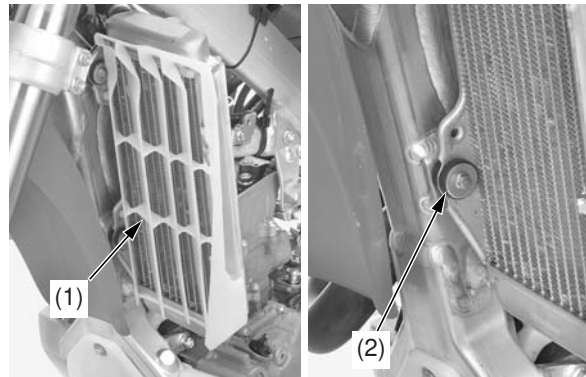


- (1) left radiator grill
(2) left radiator lower mounting bolt/washer

11. Disconnect the primary wire connector (3). Remove the bolts/clamp (4) and ignition coil (5).

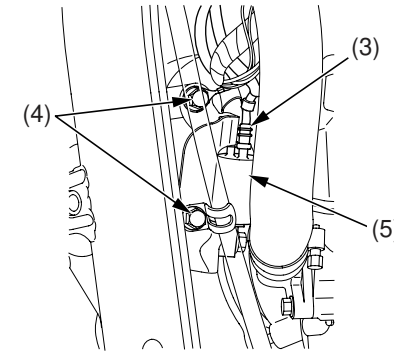

- (3) primary wire connector
(4) bolts/clamp
(5) ignition coil

12. Loosen the radiator hose clamp (6) and disconnect the radiator hose (7).

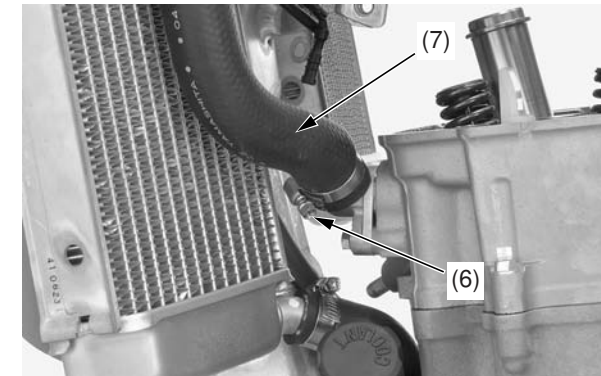

- (6) radiator hose clamp
(7) radiator hose