


Normal MODE

Press the SEL button to select the Odometer, TRIP A, TRIP B, Current fuel mileage, Average fuel mileage (TRIP A/TRIP B) or Fuel consumption (TRIP A/TRIP B).

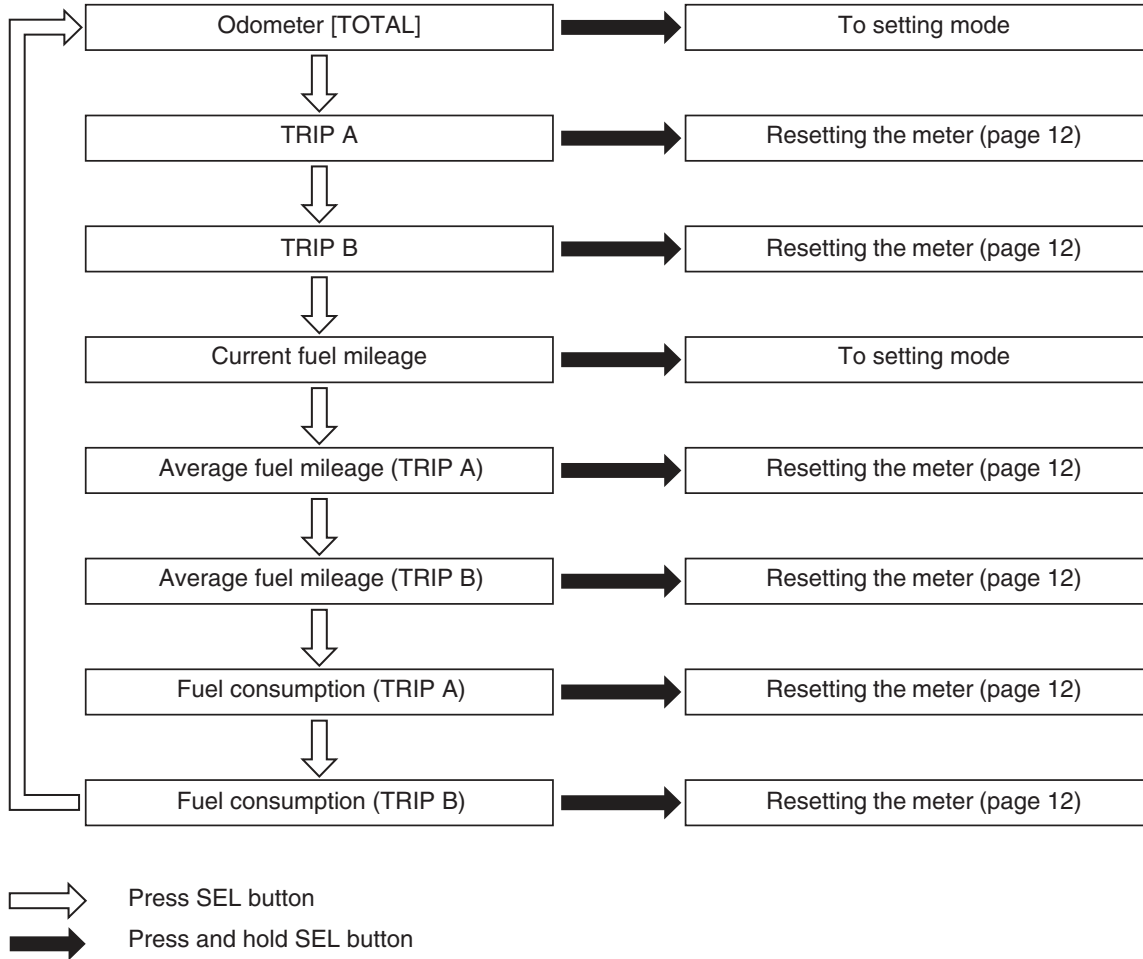


Setting MODE

Press and hold the SEL button while odometer or current fuel mileage is displayed, the display turn into the setting mode.

Following items can be changed sequentially.

- Time format setting
- Clock setting
- Backlight brightness adjustment
- Changing of speed and mileage unit
- Changing of fuel mileage unit

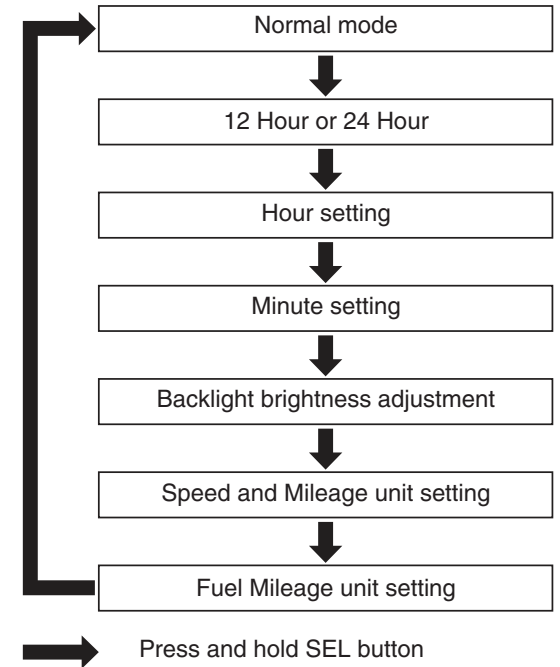

In addition, to move the ordinary display at display setting.

- The buttons is not pressed for about 30 seconds.
- Stop the engine and then restart the engine.