



# Fuel Tank

8. Disconnect the fuel pump connector (14) and remove the harness band clip (15).
9. Reposition the fuel tank and start the engine and let it idle until the engine stalls.

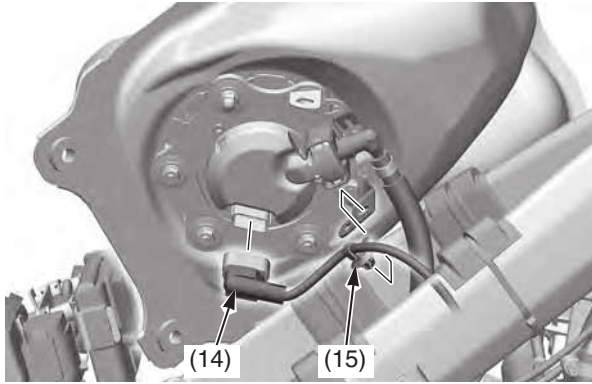


(14) fuel pump connector (15) harness band clip

10. Lift the fuel tank (12) out of the frame. Remove the fuel quick connect fitting cover (16) from the fuel pump (17).

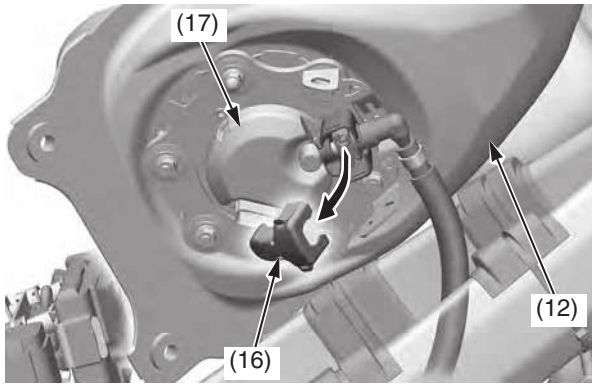

(12) fuel tank  
(16) fuel quick connect fitting cover  
(17) fuel pump

11. Check the fuel quick connect fitting (18) for dirt, and clean if necessary.
12. Place a shop towel (19) over the fuel quick connect fitting.

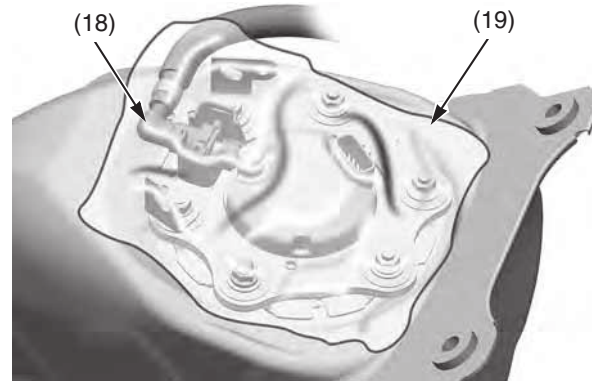


(18) fuel quick connect fitting (19) shop towel

13. Unlock the slide retainer (20) of the quick connect fitting by completely pulling it up. Release the fuel quick connect fitting (18) from the fuel joint (21) while holding the connector housing (22), then remove the fuel tank (12).

Use a shop towel to absorb the remaining fuel in the fuel feed hose.

- Be careful not to damage the hose or other parts.
- Do not use tools.
- Dirt intruding into the connector housing may cause slide retainer sticking.

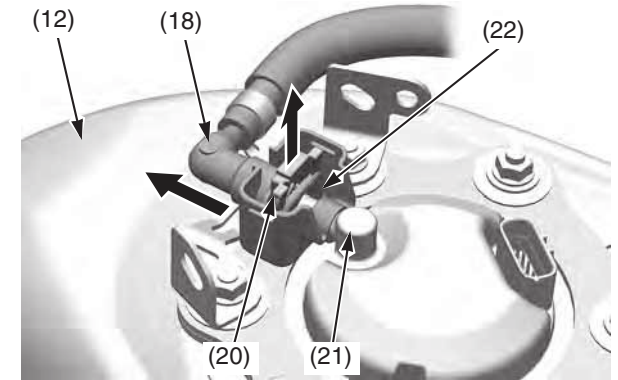

(12) fuel tank (21) fuel joint  
(18) fuel quick connect fitting (22) connector housing  
(20) slide retainer