



# Exhaust Pipe/Muffler

6. Tighten the muffler clamp bolt (10) to the specified torque:  
15 lbf-ft (20 N·m, 2.0 kgf·m)

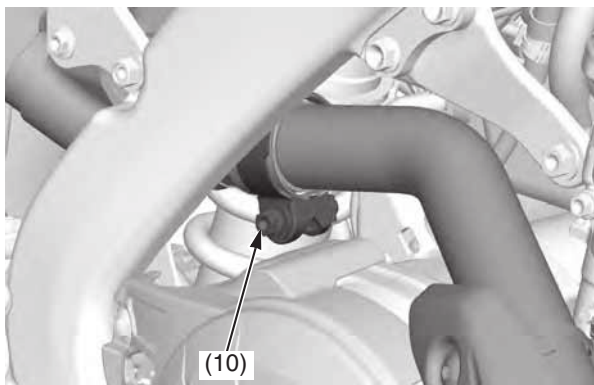

(10) muffler clamp bolt

7. Tighten the muffler mounting B bolt (8) and A bolt (9) to the specified torque:  
19 lbf-ft (26 N·m, 2.7 kgf·m)

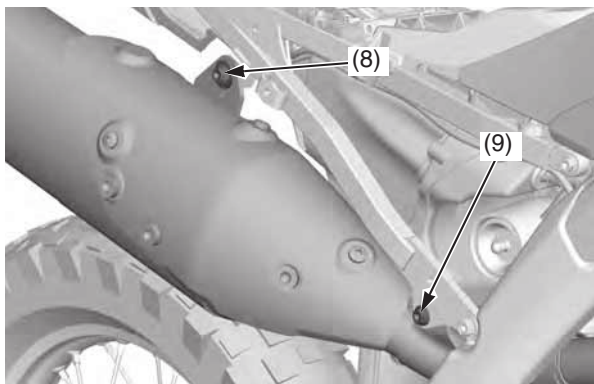


(8) muffler mounting B bolt  
(9) muffler mounting A bolt

8. Install the right side cover (page 44).
9. Install the seat (page 43).

## Exhaust Pipe Removal


1. Remove the muffler (page 127).
2. Remove the exhaust pipe joint nuts (1), exhaust pipe (2) and gasket (3).

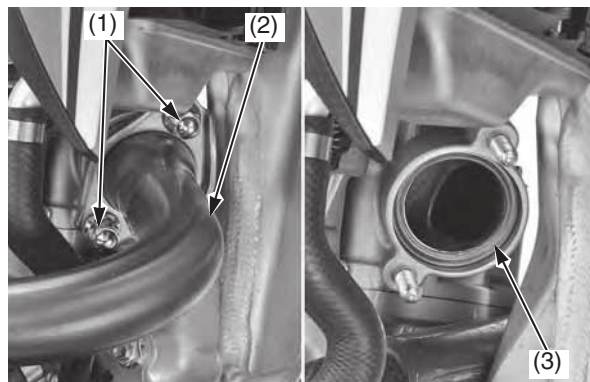

(1) exhaust pipe joint nuts  
(2) exhaust pipe  
(3) gasket

## Exhaust Pipe Installation

1. Install a new exhaust pipe gasket (1).
2. Install the exhaust pipe (2) and exhaust pipe joint nuts (3) but do not tighten the nuts yet.

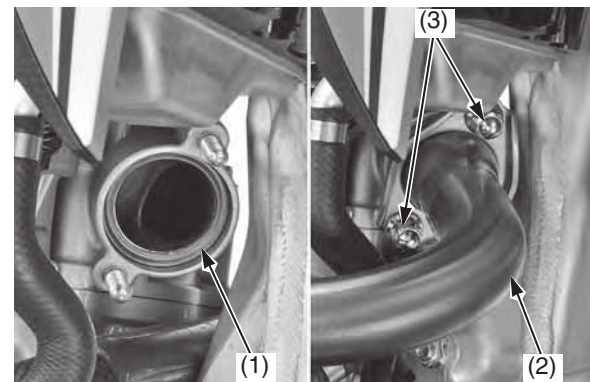

(1) exhaust pipe gasket (new)  
(2) exhaust pipe  
(3) exhaust pipe joint nuts

3. Install the muffler (page 127) but do not tighten the bolts yet.
4. Tighten the exhaust pipe joint nuts to the specified torque:  
16 lbf-ft (22 N·m, 2.2 kgf·m)
5. Tighten the muffler clamp bolt, muffler mounting A bolt and B bolt (page 127).