


## Speedometer

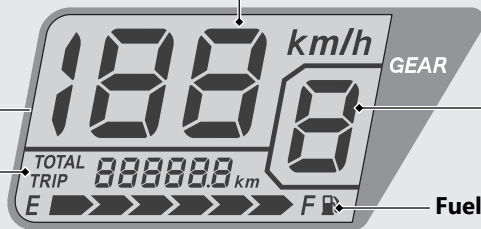

## Gear position indicator

Shows 1st to 6th gear position.

- ▶ "-" appears when the transmission is not shifted properly.

## Fuel gauge

Remaining fuel when only 1st (E) segment starts flashing: approximately 1.42 L (0.375 US gal, 0.312 Imp gal)

**If the fuel gauge indicator flashes in a repeat pattern or turns off:**  **P.80**

## Odometer [TOTAL] & Tripmeter [TRIP]

SEL button switches between the odometer and tripmeter.

- Odometer: Total distance ridden.
- Tripmeter: Distance ridden since tripmeter was reset (press and hold SEL button to reset to 0.0 km).

