


Centre Lower Cowl

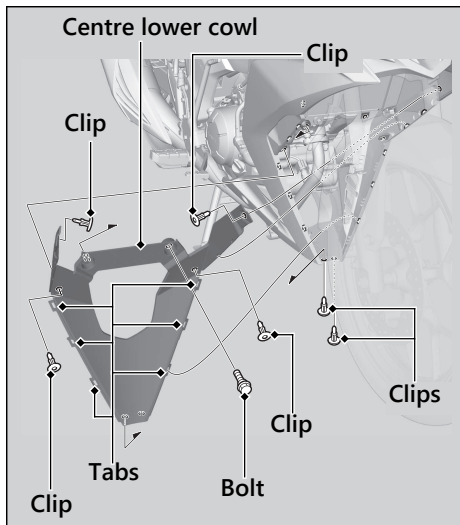

Removal

1. Remove the clips. ► P. 51
2. Remove the bolt.
3. Release the tabs on both sides from the right cowl and left cowl.
► Carefully release the tabs.
4. Remove the centre lower cowl.

Installation

Install the parts in the reverse order of removal.