



Battery

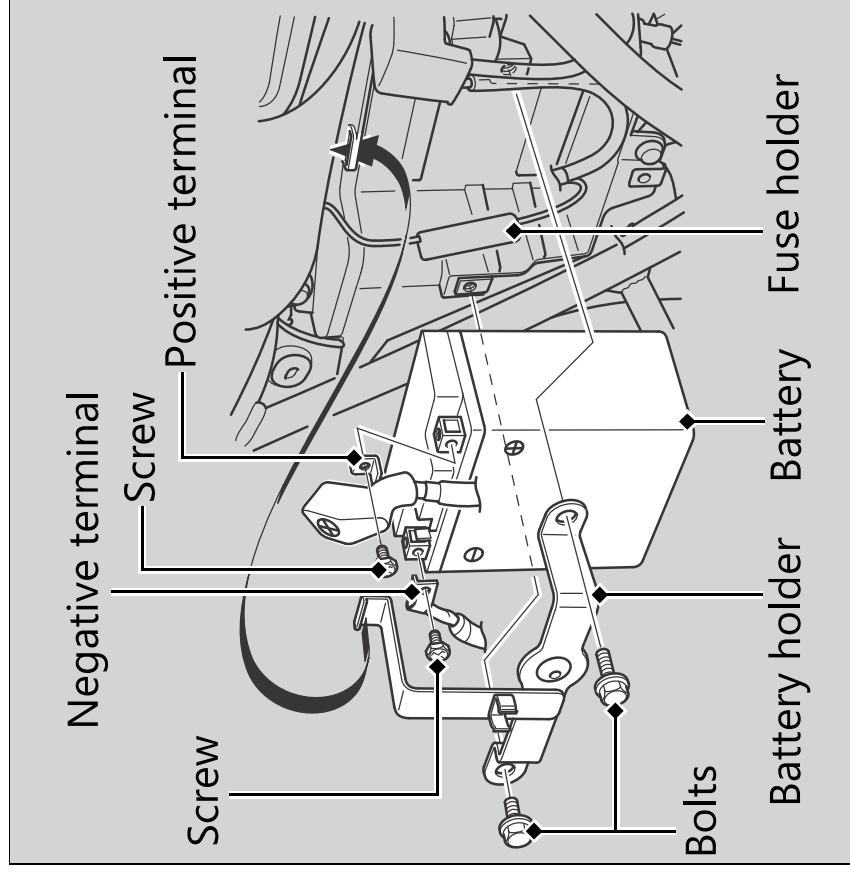

Removal

Make sure the ignition switch is in the  (off) position.

1. Remove the right side cover.  P. 48
2. Remove the fuse holder from the battery holder.
3. Disconnect the negative \ominus terminal from the battery.
4. Disconnect the positive \oplus terminal from the battery.
5. Remove the battery holder by removing the bolts.
6. Remove the battery taking care not to drop the terminal nuts.
▲ Pull out the battery and battery holder together from motorcycle.