

Troubleshooting

Engine Will Not Start	P. 73
Tyre Puncture	P. 74
Tube Repair and Replacement	P. 74
Electrical Trouble	P. 79
Battery Goes Dead	P. 79
Burned-out Light Bulb	P. 79
Blown Fuse	P. 84