

## Electrical Trouble ► Burned-out Light Bulb

1. Remove the headlight case. ► P. 46
2. Pull out the socket and remove it.
3. Pull out the bulb without turning.
4. Install a new bulb and parts in the reverse order of removal.

## Position Light Bulb

