


# Controls & Features

## Ignition Switch

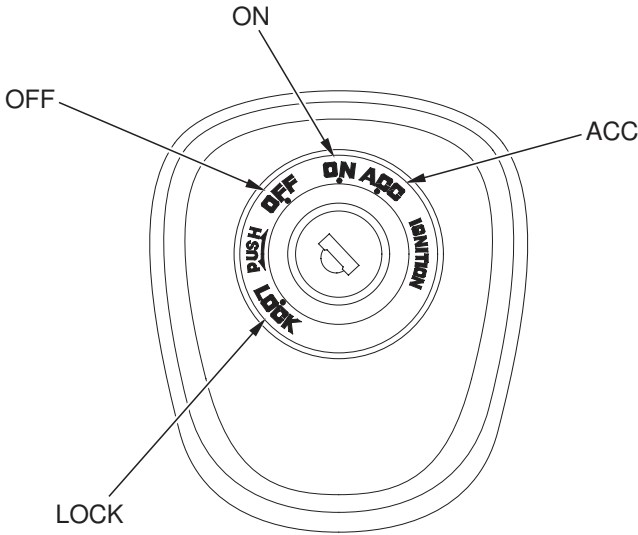

The ignition switch is used for starting and stopping the engine ([page 53](#)) and to lock the steering for theft prevention ([page 63](#)). Insert the key and turn it to the right for the ON and ACC (accessory) positions. Push down on the key and turn it to the left to the LOCK (steering lock) position.

Key Position	Function	Key Removal
ACC	Only the accessory circuits function.	cannot be removed
ON	Electrical circuits on.	cannot be removed
OFF	No electrical circuits function.	can be removed
LOCK (steering lock)	No electrical circuits function. Locks the steering head.	can be removed

To unlock the steering lock, insert and push down on the key and turn it to the right to the OFF position.