

Basic Operation & Riding

This section gives basic riding instructions, including how to start and stop your engine, and how to use the throttle, clutch, and brakes. It also provides important information on riding with a passenger or cargo.

To protect your new engine and enjoy optimum performance and service life, refer to Break-in Guidelines ([page 222](#)).

To protect the catalytic converters in your motorcycle's exhaust system, avoid extended idling and the use of leaded gasoline.

Safe Riding Precautions	52
Starting & Stopping the Engine	53
Preparation.....	53
Starting Procedure	54
Flooded Engine	54
Bank Angle Sensor Ignition Cut-off System	55
How to Stop the Engine	55
Shifting Gears.....	56
While You Are Riding	57
Braking	58
Combined ABS	60
ABS Indicator Light	61
Parking.....	63
Theft-prevention Tips	65
Riding with a Passenger or Cargo.....	66
Riding in Bad Weather.....	67