


## MODE Knob/Button Function

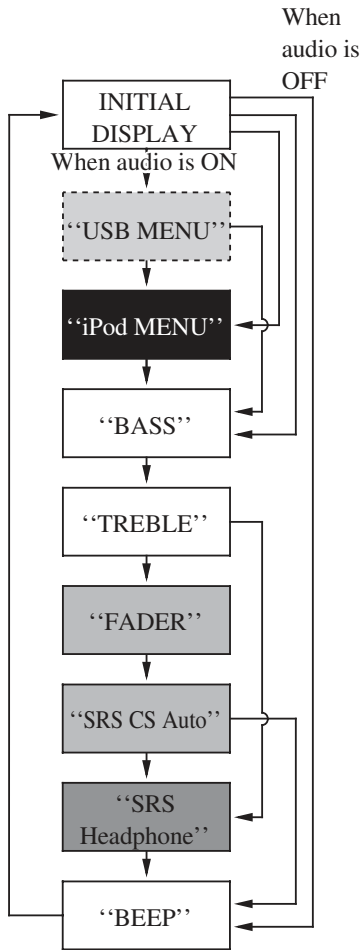

● —————> Push the MODE Knob/Button

● [Light Gray Box] When the speaker is used

● [Dark Gray Box] When the headset is used

● [Dashed Border Box] When USB flash drive is used

● [Solid Black Box] When iPod® is used