


Engine Oil & Filter

Checking & Adding Oil

Refer to *Safety Precautions* on [page 118](#).

RIGHT SIDE

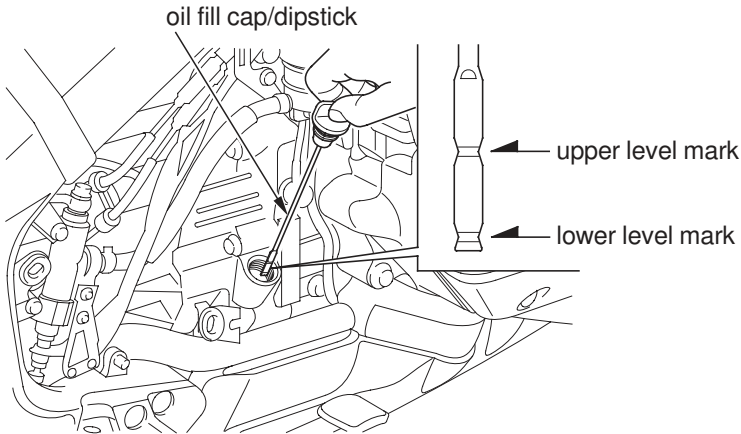

(Models equipped with center stand)

1. Park your motorcycle on its center stand on a firm, level surface.

(Models not equipped with center stand)

1. Park your motorcycle on its side stand on a firm, level surface.

2. Remove the right engine side cover ([page 132](#)).

3. Start the engine and let it idle for 3–5 minutes. Make sure the low oil pressure indicator goes off. If the indicator remains on, stop the engine immediately.

4. Stop the engine and wait 2–3 minutes.

(Models not equipped with center stand)

5. Hold the motorcycle in an upright position.

6. Remove the oil fill cap/dipstick and wipe it clean.

7. Insert the oil fill cap/dipstick until it seats, but don't screw it in.

8. Remove the oil fill cap/dipstick and check the oil level.

- If the oil is at or near the upper level mark — you do not have to add oil.

- If the oil is below or near the lower level mark — add the recommended oil until it reaches the upper level mark. (Do not overfill.)

9. Reinstall the oil fill cap/dipstick.

10. Reinstall the right engine side cover.

11. Check for oil leaks.