


Beep Set

- To use the circuit ——— push the MODE knob/button until “BEEP” is displayed (page 75). Then, within 5 seconds, change the beep setting.
- To change the setting — turn the MODE knob/button. (ON or OFF)

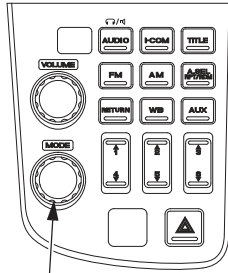

MODE knob/button

BEEP
OFF