

# Gauges & Indicators

---



turn signal indicator (green)

Flashes when either turn signal operates.

---



neutral indicator (green)

Lights when the transmission is in neutral.

---



overdrive indicator (amber)

Lights when the transmission is in overdrive (5th gear).

---



low oil pressure indicator (red)

Lights when engine oil pressure is low enough to cause engine damage. If the low oil pressure indicator lights during operation, pull safely to the side of the road. See page 209 for instructions and cautions. *Lamp Check*.

---



PGM-FI malfunction indicator lamp (MIL) (amber)

Lights when there is any abnormality in the PGM-FI (Programmed Fuel Injection) system. Should also light for a few seconds and then go off when the ignition switch is turned ON and the engine stop switch is at RUN. If the indicator comes on at any other time, reduce speed and take your motorcycle to your dealer as soon as possible. *Lamp Check*.