

# Audio Systems

---

## Treble:

To select the Treble control, push the MODE knob/button until “TREBLE” is displayed (page 75). Then, within 5 seconds, change the treble control.

- To emphasize treble — turn the MODE knob/button clockwise.
- To reduce treble — turn the MODE knob/button counterclockwise.  
(Treble level ranges from 6 down to — 6.)

