

Maintenance Schedule

ITEM		FREQUENCY	NOTE	ODOMETER READING (Note 1)							Refer to page	
				x1,000 mi	4	8	12	16	20	24		
				x1,000 km	6.4	12.8	19.2	25.6	32.0	38.4		
NON-EMISSIONS-RELATED ITEMS		FINAL DRIVE OIL				I		I			R	154
		BRAKE FLUID	5		I	I	R	I	I		R	163
		BRAKE PADS WEAR			I	I	I	I	I		I	165
		BRAKE SYSTEM				I		I			I	166
	*	BRAKELIGHT SWITCH				I		I			I	–
	*	HEADLIGHT AIM				I		I			I	–
		CLUTCH SYSTEM				I		I			I	156
		CLUTCH FLUID	5		I	I	R	I	I		R	157
		SIDE STAND				I		I			I	174
	*	SUSPENSION				I		I			I	–
	*	NUTS, BOLTS, FASTENERS				I		I			I	–
	**	WHEELS/TIRES				I		I			I	–
	**	STEERING HEAD BEARINGS				I		I			I	–

* Should be serviced by your dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 234).

** In the interest of safety, we recommend these items be serviced only by your dealer.