Instruments (Continued)

Units

You can change the units used for fuel consumption, distance, temperature and air pressure.



To Change the Unit for Fuel Consumption [Fuel consumption]

If you want to select "L/100km" or "km/L" for fuel consumption, "km" must be selected in the [Distance] menu in advance. When "Mile" for distance is selected, only "MPG" can be selected.

- 1 Select [Units], and then press or ENT switch.
- With [Fuel consumption] selected, press or **ENT** switch until the desired unit is displayed.

Selectable units: L/100km, km/L or MPG Default: MPG (USA model) / L/100km (Canada model)

3 Return to the previous screen or the Home screen. ←>P.24

The units for average fuel mileage [Fuel consumption (Avg.)] and current fuel mileage [Fuel consumption (Inst.)] are changed in the information bar.

To Change the Unit for Distance [Distance]

- 1 Select [Units], and then press or **ENT** switch.
- 2 Rotate ⑤ or press ▲ / ▼ on the 4-way key switch to select [Distance].

Selectable unit: km or Mile Default: Mile (USA model) / km (Canada model)

4 Return to the previous screen or the Home screen. • P. 24

The units for the cruise control set speed (**), odometer [TOTAL], tripmeter A/B [TRIP A/B] and available driving distance [RANGE] are changed in the INFO 1 display. In addition, the units for average fuel mileage [Fuel consumption (Avg.)] and current fuel mileage [Fuel consumption (Inst.)] are changed in the information bar.

To Change the Unit for Air Temperature Gauge [Temperature]

- 1 Select [Units], and then press or ENT switch.
- ② Rotate ⑤ or press ▲ / ▼ on the 4-way key switch to select [Temperature].
- **3** With [Temperature] selected, press or **ENT** switch to select the unit.

Selectable unit: °F or °C

Default: °F (USA model) /
°C (Canada model)

4 Return to the previous screen or the Home screen. ♠₽.24

The unit for air temperature gauge [AIR] is changed in the INFO 1 display.