


Steering Lock

Lock the steering when parked to help prevent theft.


A U-shaped wheel lock or similar device is also recommended.

- ▶ When using a U-shaped wheel lock or similar device, be careful not to damage the wheels.

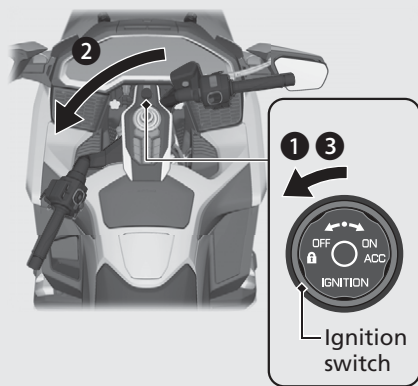

Locking

- 1 Turn the ignition switch to OFF. (→ P.49)
 - 2 Turn the handlebars all the way to the left or right.
 - 3 Turn the ignition switch counterclockwise.
 - ▶ The steering lock indicator comes on briefly and the steering is automatically locked.
 - ▶ If the steering lock indicator blinks and the alarm sounds, the steering has not been locked completely because the steering was not positioned all the way to the left or right.
- If this occurs, reposition the handlebars all the way to the left or right, then turn the ignition switch counterclockwise (The steering can also be locked by positioning it all the way to the left or right while the alarm is sounding).

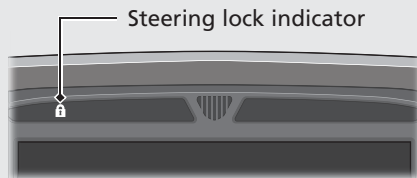

Unlocking

- 1 Make sure that the Honda SMART Key is activated (→ P.56) and enter the operating range. (→ P.57)
- 2 Turn the ignition switch clockwise.
 - ▶ The steering is unlocked automatically.