

# Parking Brake

## Parking Brake Lever

GL1800BD/D/DA

Be sure the parking brake is applied when parked and warming up the engine.

- ▶ Make sure the parking brake lever is released before riding.

To apply the parking brake:

Squeeze the front brake lever and pull the parking brake lever back to lock the rear wheel.

- ▶ The parking brake lock will not function if the parking brake is not adjusted properly. [➔ P. 162](#)

To release the parking brake:

Release the parking brake lever by lightly pulling in the lever.

- ▶ Before riding, check that the parking brake indicator is turned off and make sure that the parking brake is fully released so there is not drag on the rear wheel.

