Audio System (Continued)

Connecting your iPhone/iPod/USB device

You can connect your iPhone/iPod/USB device using a certified cable to the USB connector or connect a USB flash drive, etc. to the USB connector directly. Make sure to use the factory USB cable that came with your device.

Compatible Devices

iPhone, iPod and other devices compatible with your audio system are:

| · · · · | , | · |
|---|--------------------|-------------------------------|
| USB flash drive | Standard | USB 2.0/3.0 |
| | File systems | FAT32 (recommendation), |
| | | FAT16, HFS+ |
| | Storage capacities | From 256 MB to 64 GB |
| | Maximum | 8 hierarchies |
| | hierarchies | |
| | Maximum folders | 512 folders |
| | Maximum files | 65,524 files (same limitation |
| | | in one folder) |
| | Maximum file/ | 255 characters |
| | folder name size | |
| | Maximum file size | 2 GB (in single file) |
| iPhone [®] 5 or later | iOS 10 or later | |
| iPod touch [®] (5th generation) or later | iOS 9 or later | |
| iPad®/iPad Air®/iPad Mini® (all model) | Not supported | |
| iPod classic®/iPod shuffle®/ | Not supported | |
| iPod nano® (all model) | | |
| Hard disk drive | Not supported | |
| Card reader/Memory reader | Not supported | |
| CD/DVD/FD drive | Not supported | |
| USB hub | No | ot supported |
| | | |

- Some USB flash drives maybe unsupported or incompatible and will cause abnormal audio function, such as skipping or playing delays.
- Do not use hard disks, card readers, and memory readers which may damage the device and data. If you accidentally connect the one of them, turn the ignition switch OFF and remove it.