## **Maintenance**

Please read "Importance of Maintenance" and "Maintenance Fundamentals" carefully before attempting any maintenance. Refer to "Specifications" for service data.

An optional larger tool kit may be available. Check with your Honda dealer's parts department.

Importance of Maintenance	Ρ.	137
Maintenance Schedule	Ρ.	138
Maintenance Fundamentals	Р.	140
Removing & Installing Body Components.	Р.	150
Battery	Р.	150
Cylinder Head Side Cover	Р.	15
Fog Light Cover	Р.	15
Left Engine Side Cover	Р.	152
Side Cover	Р.	152
Spark Plug	Р.	153
Engine Oil	Р.	154
Coolant	Ρ.	158

inal Drive Oil	<b>.</b> P.	159
Brakes	. P.	160
ide Stand	Ρ.	163
lutch	Р.	164
Throttle	Р.	165
Crankcase Breather	Р.	166
Other Adjustments		
Headlight Aim	Ρ.	167
Clutch and Brake Levers		
Electrical Adjustable Suspension		
GL1800/D/DA	Р.	168
Rear Suspension GL1800B/BD		

Other Replacement	Р.	170
Honda SMART Key Battery	Р.	170