

Instruments *(Continued)*


GL1800/B

| Indication | Gear position |
|------------|------------------|
| I | 1st gear |
| II | 2nd gear |
| III | 3rd gear |
| IV | 4th gear |
| V | 5th gear |
| VI | 6th gear |
| N | Neutral |
| R | Reverse* |
| — | Shifting failure |

* Except GL1800B USA model

" — " flashes when the transmission is not shifted properly.

Riding Mode Indicator

Refer to "Riding Mode"  P.120

D (AT MODE) Indicator ()

GL1800BD/D/DA

Comes on when AT MODE is selected.

 P.116

Idling Stop OFF Indicator ()

GL1800D/DA Canada model only

Comes on briefly when the ignition switch is turned ON.


Comes on when the Idling Stop system is off.

Idling Stop system:  P.61

Walking Speed Mode Indicator ()

GL1800BD/D/DA

Comes on when in Walking Speed mode.

Walking Speed Mode:  P.117