


Audio System (Continued)

Left Handlebar

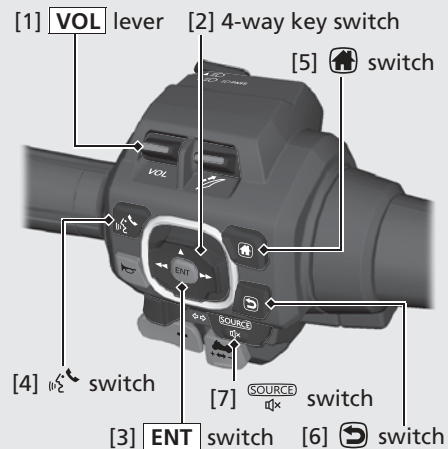

[1] **VOL** (volume control) lever: Push the lever up to increase the volume.

- To increase the volume: Push the lever up.
- To decrease the volume: Push the lever down.
- To increase the volume rapidly: Push up and hold the lever.
- To decrease the volume rapidly: Push down and hold the lever.

[2] 4-way key switch: Press right, left, up or down to select a menu item.

- When listening to the radio
 - Press ▲ : Switches to a higher-frequency.
 - Press ▼ : Switches to a lower-frequency.
 - Press and hold ▲ : Selects the next station with strong reception.
 - Press and hold ▼ : Selects the previous station with strong reception.
 - Press ►► : Selects the next preset radio station.
 - Press ◀◀ : Selects the previous preset radio station
- When listening to an iPod, USB flash drive or *Bluetooth*® audio
 - Press ►► : Skips to the next song.
 - Press ◀◀ : Goes back to the beginning of the current or previous song.

[3] **ENT** switch: Press to set your selection.

[4] Voice control switch: Press to receive, reject or end a call. Starts Siri if Apple CarPlay is available.

[5] Home switch: Select to go to the home screen.

[6] Back switch: Press to return to the previous screen.

[7] SOURCE (Source/Private Mode) switch: Press to change the audio mode. Cycles through the audio modes as follows:

[FM] → [AM] → [SXM] (option) → [USB] → [iPod] → [Bluetooth] → [AUX] (option)

- When playing an audio
 - Press and hold SOURCE switch to mute the volume and to pause a track
- When receiving a call
 - Press and hold SOURCE switch to enable/disable the private mode.