

Engine Oil & Filter

Changing Engine Oil & Filter

Refer to *Safety Precautions* on [page 154](#).

Your motorcycle's oil filter has very specific performance requirements. Use a new Honda Genuine oil filter or a filter of equal quality specified for your model.

NOTICE


Using the wrong oil filter may result in leaks or engine damage.

This procedure requires mechanical skill and professional tools such as a torque wrench and oil filter wrench, as well as a means for disposing of the drained fluid ([page 223](#)). If you do not have the skills or the tools, see your dealer.

Drain the Engine Oil:

1. Park your motorcycle on its center stand on a firm, level surface.
2. If the engine is cold, start it and let it idle for 3 – 5 minutes. Turn the engine off. Wait 2 – 3 minutes for the oil to settle.
3. Remove the front lower cover ([page 170](#)).
4. Place a drain pan under the engine oil drain bolt.
5. To drain the oil, remove the oil fill cap/dipstick, engine oil drain bolt, and sealing washer.

FRONT, UNDER ENGINE

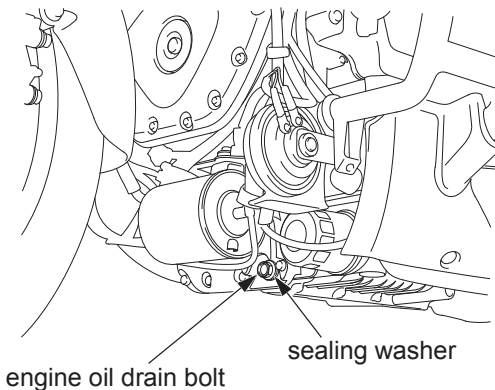

(cont'd)