

# Multi Information Display

---

## Digital Clock

(Models not equipped with Navigation System)


The display shows the hour and minute.

To adjust the time:

1. Turn the ignition switch to ON or ACC.
2. Push the **SETUP** button once. “**CLOCK ADJUST**” will display.
3. To set the hour, press and release the **INFO** button until the desired hour appears.
  - Quick setting — push and hold the **INFO** button until the desired hour appears.
4. To set the minute, press and release the **TRIP** button until the desired minute appears.
  - Quick setting — push and hold the **TRIP** button until the desired minute appears.
5. Once the time is selected, push the **SETUP** button to enter the time.

When approximately 5 seconds pass without operating a button on the **CLOCK ADJUST** display, the display automatically returns to the previous display.

Be sure to push the **SETUP** button to enter your adjusted time in the system.

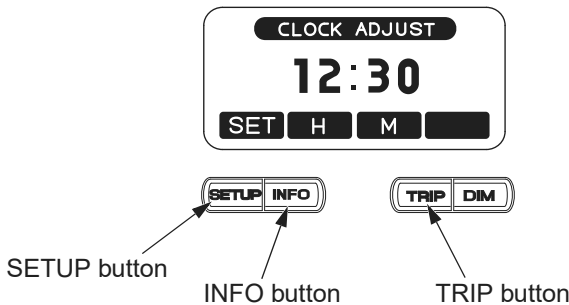

(Models equipped with Navigation System)

The navigation system receives signals from the Global Positioning System (GPS) and automatically sets the time display based on the time zone you select. You may also set the time manually using the “Other” option. Refer to the Navigation System Manual.