

# Maintenance Schedule

ITEMS		FREQUENCY	NOTE	ODOMETER READING (Note 1)							Refer to page	
				×1,000 mi	4	8	12	16	20	24		
				×1,000 km	6.4	12.8	19.2	25.6	32.0	38.4		
NON-EMISSIONS-RELATED ITEMS		FINAL DRIVE OIL				I		I			R	186
		BRAKE FLUID	5		I	I	R	I	I		R	197
		BRAKE PADS WEAR			I	I	I	I	I	I		199
		BRAKE SYSTEM				I		I			I	200
	*	BRAKE LIGHT SWITCH				I		I			I	-
	*	HEADLIGHT AIM				I		I			I	-
		CLUTCH SYSTEM				I		I			I	188
		CLUTCH FLUID	5		I	I	R	I	I		R	189
	*	REVERSE OPERATION				I		I			I	-
		SIDE STAND				I		I			I	208
	*	SUSPENSION				I		I			I	-
	*	NUTS, BOLTS, FASTENERS				I		I			I	-
	**	WHEELS/TIRES				I		I			I	-
	**	STEERING HEAD BEARINGS				I		I			I	-

\* Should be serviced by your dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 270).

\*\* In the interest of safety, we recommend these items be serviced only by your dealer.