

# Instruments & Controls

---

This section shows the location of all gauges, indicators, and controls you would normally use before or while riding your motorcycle.

The items listed on this page are described in this section. Instructions for other components are presented in other sections of this manual where they will be most useful.

Operation Component Locations .....	12
Gauges & Indicators.....	15
Multi Information Display .....	21
Opening/Ending Ceremony .....	22
On/Off-Opening/Ending Ceremony .....	23
Special Message for Opening/Ending Ceremony .....	24
Odometer/Tripmeter.....	26
Switch the Day Mode Display and Night Mode Display .....	27
Display Illumination Adjustment.....	28
Digital Clock .....	30
Air Temperature Meter.....	31
Travel Trunk & Saddlebags Open Indicator .....	32
Display Type Selection .....	33
Changing the Information Display.....	34
Controls & Features .....	35
Ignition Switch .....	35
Engine Stop Switch .....	36
Start/Reverse Button .....	37
Reverse (RVS) Switch .....	37
Cruise Control Switches .....	37
Headlight Dimmer Switch .....	38
Turn Signal Switch.....	38
Horn Button .....	38
Audio Control Switches .....	38
Hazard Switch .....	39
Headlight Beam Adjustment Switch.....	40
Rear Suspension Spring Pre-load Adjustment Switch.....	41
Ventilation Controls .....	41
Windscreen Height Adjustment .....	41