


Fader Control


To balance the sound between the front and rear speakers – push the MODE knob/button until “FADER” (“Fader”) is displayed (page 97). Then, within 5 seconds, change the fader control. (The control range: F (front) and R (rear) each have 9 segments.)

(Models not equipped with Navigation System)

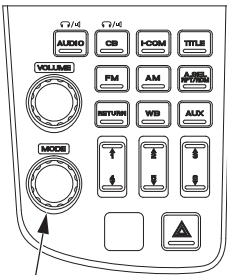

MODE knob/button

(Models equipped with Navigation System)

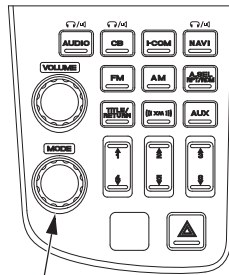

MODE knob/button

