


## Beep Set

- To use the circuit — push the MODE knob/button until “BEEP” (“Beep”) is displayed (page 97). Then, within 5 seconds, change the beep setting.
- To change the setting — turn the MODE knob/button. (ON (On) or OFF (Off))

(Models equipped with Navigation System)


At the same time, the Beep function of the Navigation System is also set.

(Models not equipped with Navigation System)

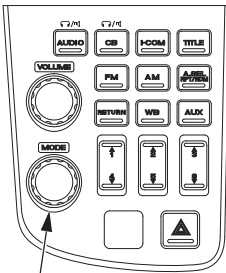

MODE knob/button

(Models equipped with Navigation System)

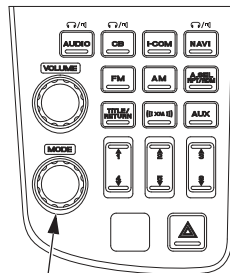

MODE knob/button

**BEEP**  
**OFF**

Beep

