

Maintenance Schedule

| ITEMS | | FREQUENCY | NOTE | ODOMETER READING (Note 1) | | | | | | | Refer to page |
|-----------------------------|------------------------|------------------------|------|---------------------------|-----|------|------|------|------|------|---------------|
| | | | | ×1,000 mi | 4 | 8 | 12 | 16 | 20 | 24 | |
| | | | | ×1,000 km | 6.4 | 12.8 | 19.2 | 25.6 | 32.0 | 38.4 | |
| NON-EMISSIONS-RELATED ITEMS | | FINAL DRIVE OIL | | | | I | | I | | R | 186 |
| | | BRAKE FLUID | 5 | | I | I | R | I | I | R | 197 |
| | | BRAKE PADS WEAR | | | I | I | I | I | I | I | 199 |
| | | BRAKE SYSTEM | | | | I | | I | | I | 200 |
| | * | BRAKE LIGHT SWITCH | | | | I | | I | | I | – |
| | * | HEADLIGHT AIM | | | | I | | I | | I | – |
| | | CLUTCH SYSTEM | | | | I | | I | | I | 188 |
| | | CLUTCH FLUID | 5 | | I | I | R | I | I | R | 189 |
| | * | REVERSE OPERATION | | | | I | | I | | I | – |
| | | SIDE STAND | | | | I | | I | | I | 208 |
| | * | SUSPENSION | | | | I | | I | | I | – |
| | * | NUTS, BOLTS, FASTENERS | | | | I | | I | | I | – |
| | ** | WHEELS/TIRES | | | | I | | I | | I | – |
| ** | STEERING HEAD BEARINGS | | | | I | | I | | I | – | |

* Should be serviced by your dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 270).

** In the interest of safety, we recommend these items be serviced only by your dealer.